

Jeremiah Lighting

ASSEMBLY & INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

WARNING: Risk of Fire. Consult a qualified electrician to ensure correct branch circuit conductor. Min 90°C supply conductors.

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

ASSEMBLY AND INSTALLATION

- Before installing, preset the NIPPLE (16) length:
 - Thread the NIPPLE(16) onto the COUPLING(14) a minimum of four turns.
 - Place the center holes of the GLASS SHADE (17) over the NIPPLE (16) and adjust the NIPPLE (16) so that it protrudes out of the BOTTOM FONT(21) 1/4". Remove the GLASS SHADE (17) and secure the NIPPLE (16) in place by tightening the HEX NUT (15).
- Pull the SUPPLY WIRES (5 & 6) and the HOUSE GROUND WIRE (7) out from the OUTLET BOX (1) and attach the MOUNTING BRACKET (2) to the OUTLET BOX (1) using the slotted holes on the MOUNTING BRACKET (2) and the MOUNTING SCREWS (3) provided.
- Thread the FIXTURE SCREWS (4) two full turns into the appropriate threaded holes in the MOUNTING BRACKET (2). (Check the MOUNTING BRACKET (2) against the fixture KEY HOLE SLOTS (13) to ensure proper fit.)
- Make the wiring connection: Connect the FIXTURE GROUND WIRE (10) to the HOUSE GROUND WIRE (7) using a WIRE CONNECTOR (11) (no included). As shown connect the BLACK SUPPLY WIRE (6) to the BLACK FIXTURE WIRE (9) and WHITE SUPPLY WIRE (5) to the WHITE FIXTURE WIRE (8) using WIRE CONNECTORS (11).

ASSEMBLY AND INSTALLATION (CONT.)

- Carefully tuck all wiring back into the OUTLET BOX (1). Locate the FIXTURE PAN (12) over the OUTLET BOX (1), positioning the FIXTURE SCREWS (4) heads through the large openings of the KEY HOLE SLOTS (13). Rotate the FIXTURE PAN (12) to seat the screws, and tighten securely. (See Fig. 2)
- Screw light bulbs into the sockets and make sure they do not exceed the maximum wattage specified on the fixture's wattage label,
- Place the center hole of the GLASS SHADE (17), RUBBER WASHER(18), GASKET(19) over the NIPPLE (16) and secure with the HEX NUT(20). Place the BOTTOM FONT(21)over the NIPPLE(16), screw the FINIAL(22) onto the NIPPLE(16).

INSTALLATION IS NOW COMPLETED

Fig.1


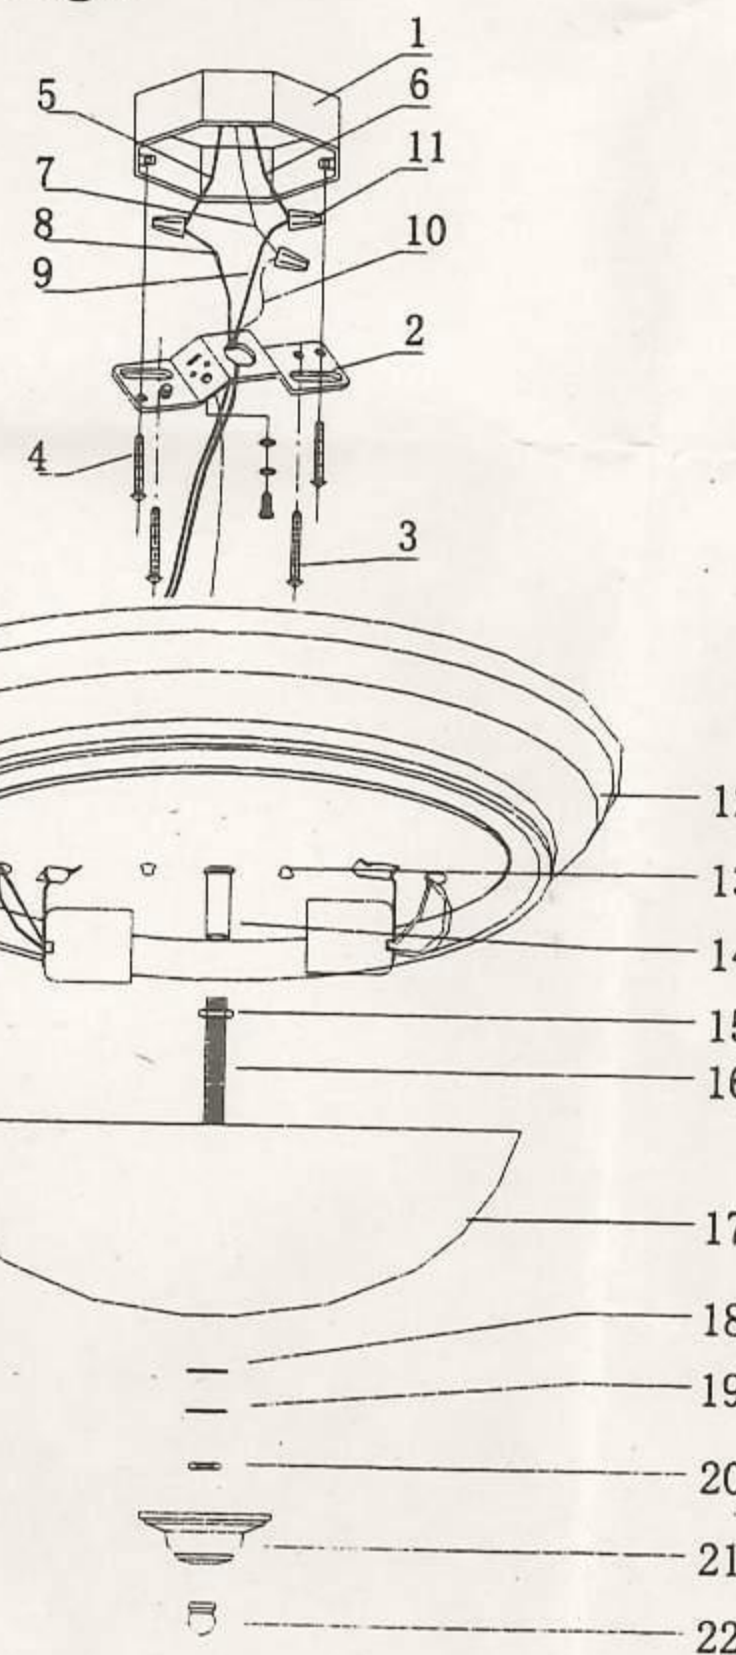


Fig.2

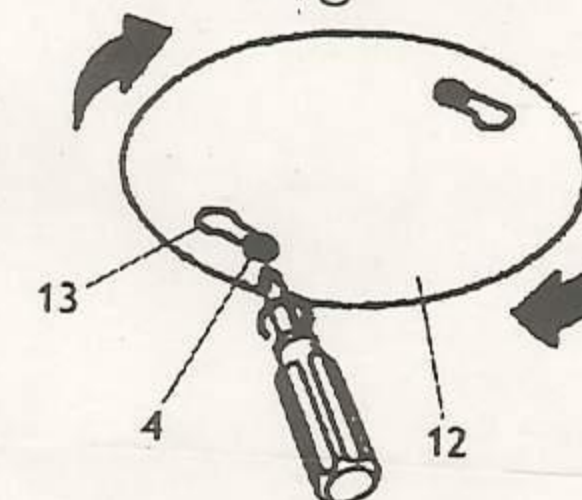

- OUTLET BOX
- MOUNTING BRACKET
- MOUNTING SCREW
- FIXTURE SCREW
- WHITE SUPPLY WIRE
- BLACK SUPPLY WIRE
- HOUSE GROUND WIRE
- WHITE FIXTURE WIRE
- BLACK FIXTURE WIRE
- FIXTURE GROUND WIRE
- WIRE CONNECTOR
- FIXTURE PAN
- KEY HOLE SLOT
- COUPLING
- HEX NUT
- NIPPLE
- GLASS SHADE
- RUBBER WASHER
- GASKET
- HEX NUT
- BOTTOM FONT
- FINIAL